



HP Photosmart Premium Maintenance

Tools used in this guide

- [hands](#) (1)

Parts relevant to this guide


- [Water](#) (1)
- [napkins](#) (1)

This guide is primarily targeted at HP and Canon printers being these are the only ones I know use this printhead. You may also be able to disassemble Epson printers to remove the printheads, but results will not be as good as with HP and Canon printers.



Step 1 -

- Turn on the printer to move the printhead to the center, and gather the supplies you will need.

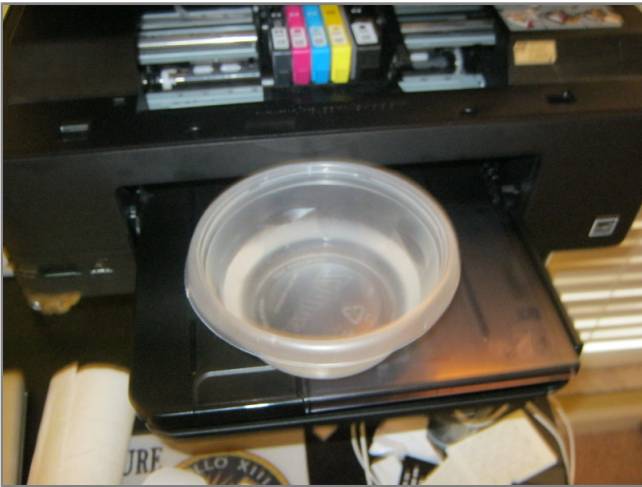

Step 2

- Pour some water in a small dish; the dish must be large enough to hold the printhead.



Step 3

- Remove the printhead from the printer, place it in the water dish, and allow it to soak until the ink has dissolved in the water.
- Swish it around periodically and changed the water as necessary.
- Dry the printhead **THOROUGHLY** before it goes in the printer, otherwise you may damage the printer and/or printhead!
- As you can tell,mine is pretty backed up and i refuse to waste my ink cleaning it in the utility



Step 4

- Reassemble the printer, and dispose of the wastewater safely.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 14, 2010.