

Table of Contents

Preface

Chapter 1 Outline of the A360

- 1.1 Introduction / 1-1
- 1.2 Feature Highlights / 1-1
- 1.3 System Configuration / 1-4
- 1.4 Quick Tour of the Notebook / 1-5
 - 1.4.1 Inside the Notebook / 1-5
 - 1.4.2 Front Side of the Notebook / 1-11
 - 1.4.3 The Right Side of the Notebook / 1-12
 - 1.4.4 The Left Side of the Notebook / 1-13
 - 1.4.5 The Rear Side of the Notebook / 1-15
 - 1.4.6 The Under Side of the Notebook / 1-17
- 1.5 System BIOS SETUP Program / 1-18
 - 1.5.1 Using the Main Menu / 1-19
 - 1.5.2 Using the Advanced Menu / 1-21
 - 1.5.3 Using the Security Menu / 1-25
 - 1.5.4 Using the Boot Menu / 1-26
 - 1.5.5 How to Exit the Setup Program / 1-27
- 1.6 Notebook Accessories and System Options / 1-28
 - 1.6.1 AC Adapter and Power Cord / 1-28
 - 1.6.2 Battery Pack / 1-28
 - 1.6.3 Car Cigarette Power Cable / 1-28
 - 1.6.4 Internal Modem Module / 1-28
 - 1.6.5 Internal Ethernet LAN Module / 1-28
 - 1.6.6 DVD-ROM Drive / 1-28
 - 1.6.7 CD-RW Driver / 1-29
 - 1.6.8 Audio-DJ / 1-29

Chapter 2 Installation and Upgrade

- 2.1 Overview / 2-1
- 2.2 Notebook Drivers and Utilities / 2-1

Table of Contents

2.2.1	Running the PHDISK STD Utility / 2-1
2.2.2	Installing Windows 98 / Me / 2000 from CD / DVD ROM / 2-2
2.2.3	Installing the VGA Device Driver / 2-2
2.2.4	Installing the Audio Device Driver / 2-3
2.2.5	Installing EzSystem Driver / 2-3
2.2.6	Installing Touch Pad Driver / 2-4
2.2.7	Installing the Internal Modem / 2-4
2.2.8	Installing the Internal LAN / 2-6
2.2.9	Installing the Internal Como Modem / LAN / 2-7
2.3	System Upgrades / 2-8
2.3.1	Jumper Settings / 2-8
2.3.2	CPU Upgrade Procedure / 2-9
2.3.3	Memory Upgrade Procedure / 2-11
2.3.4	Hard Disk Upgrade Procedure / 2-12
2.3.5	System BIOS Upgrade Procedure / 2-14

Chapter 3 Software Functional Overview

3.1	Overview / 3-1
3.2	Summary of the BIOS Specification / 3-1
3.3	Subsystem Software Functions / 3-2
3.3.1	Key Chipset Summary / 3-2
3.3.2	System Memory / 3-3
3.3.3	Video / 3-3
3.3.4	Enhanced IDE / 3-5
3.3.5	Audio / 3-6
3.3.6	Super I/O / 3-6
3.3.7	PCMCIA / 3-6
3.3.8	LED Indicator / 3-6
3.3.9	Hot Keys Definition / 3-7
3.3.10	Plug & Play / 3-7
3.3.11	PCI Device / 3-8
3.3.12	SMBus Devices / 3-9
3.3.13	Resource Allocation / 3-9
3.3.14	GPIO Pin Assignment / 3-11
3.3.15	Intel PIIX4M GPI Signal / 3-13

Table of Contents

3.3.16	Intel PIIX4M GPO Signal / 3-13
3.3.17	PMU07 GPIO Signal / 3-14
3.3.18	A550L Super I/O 37N869 GPIO Pin Definition /3-14
3.3.19	M38867 GPIO Signal / 3-15
3.4	Power Management / 3-15
3.4.1	General Requirements / 3-15
3.4.2	System Power Plane / 3-15
3.5	ACPI / 3-16
3.5.1	General Requirements / 3-16
3.5.2	System Power Plane / 3-16
3.5.3	Global System State Definitions / 3-16
3.5.4	Device Power State Definitions / 3-17
3.5.5	Sleeping State Definitions / 3-18
3.5.6	Power States / 3-19
3.5.7	Power States transition event / 3-19
3.5.8	Lid Switch / 3-20
3.5.9	Power Button and Internet / Mail Button / 3-20
3.5.10	Device Power Management / 3-20
3.5.11	Expanding Event Through the Embedded Controller / 3-22
3.5.12	Thermal Control / 3-24
3.5.13	Hardware Thermal Events / 3-26
3.5.14	Active Cooling Strength / 3-26
3.5.15	Passive Cooling Equation / 3-27
3.5.16	Critical Shutdown / 3-28
3.5.17	Other Implementation Of Thermal Controllable Devices / 3-28
3.5.18	Thermal Control Methods / 3-29
3.5.19	AC Adapters and Power Source Objects / 3-31
3.6	Battery Management / 3-31
3.6.1	Battery Sub-system / 3-31
3.6.2	Battery Warning / 3-31
3.6.3	Battery Low / 3-31
3.6.4	AC Adapter / 3-32
3.7	PMU07 / 3-32
3.7.1	The System EC RAM with PMU07 / 3-32

Table of Contents

- 3.7.2 PMU07 EC RAM List / 3-33
- 3.8 Miscellaneous / 3-41
 - 3.8.1 Security / 3-41
- 3.9 CMOS Setup Utility / 3-41

Chapter 4 Hardware Functional Overview

- 4.1 Overview / 4-1
- 4.2 System Hardware Block Diagram / 4-2
- 4.4 System Processor (CPU) / 4-3
 - 4.4.1 Intel Mobile Pentium-III Features / 4-3
 - 4.4.2 Intel Mobile Celeron Features / 4-4
- 4.5 System Core Logic / 4-5
 - 4.5.1 82443ZX Features / 4-5
 - 4.5.2 82371MB (PIIX4M) Features / 4-6
- 4.6 Clock Frequency Generator / 4-8
- 4.7 Cache Memory / 4-8
- 4.8 System Memory / 4-8
 - 4.8.1 System Memory / 4-8
 - 4.8.2 Video Memory / 4-8
- 4.9 System BIOS / 4-8
- 4.10 Video Subsystem / 4-9
 - 4.10.1 Video Chip Controller / 4-9
 - 4.10.2 Video Clock / 4-9
- 4.11 I/O Subsystem / 4-9
- 4.12 PCMCIA Controller / 4-10
- 4.13 Audio Subsystem / 4-11
- 4.14 Keyboard and Pointing Device / 4-13
- 4.15 Disk Drives Subsystem / 4-14
- 4.16 Power Subsystem / 4-14
 - 4.16.1 AC Power Adapter / 4-14
 - 4.16.2 Internal Battery Pack / 4-14
 - 4.16.3 DC-DC Module of Motherboard / 4-14
 - 4.16.4 LCD Inverter Board Assembly / 4-14
- 4.17 Micro-P Subsystem (PMU-07) / 4-15

Table of Contents

Chapter 5 Maintenance & Disassembly

- 5.1 Introduction / 5-1
- 5.2 Preventive Maintenance / 5-1
 - 5.2.1 Cleaning the Computer / 5-1
 - 5.2.2 Protecting the Disk Drives / 5-1
 - 5.2.3 Maintaining the LCD Quality / 5-1
 - 5.2.4 Maintaining the Hard Disk Drive / 5-2
 - 5.2.5 Handling the Computer Battery Packs / 5-2
- 5.3 Required Tools and Equipment / 5-3
- 5.4 Notebook Field-Replaceable Parts and Assemblies / 5-3
 - 5.4.1 Cover-Display LCD assembly / 5-4
 - 5.4.2 System Unit Assembly / 5-4
- 5.5 Parts Removal and Replacement Procedures / 5-6
 - 5.5.1 Removing the Battery Pack / 5-6
 - 5.5.2 Removing the Keyboard / 5-6
 - 5.5.3 Removing the LCD Panel / 5-7
 - 5.5.4 Removing the Internal Hard Disk Drive / 5-9
 - 5.5.5 Removing the Heat Sink Plate and Cooling Fan/5-10
 - 5.5.6 Removing the CD-ROM Module / 5-10
 - 5.5.7 Removing the System Top Cover / 5-11
 - 5.5.8 Removing the Glide Pad / 5-12
 - 5.5.9 Removing the Audio Board / 5-13
 - 5.5.10 Removing the Battery Board / 5-14
 - 5.5.11 Removing the Internal Speakers / 5-14
 - 5.5.12 Removing the FDD Module / 5-15
 - 5.5.13 Removing the CPU / 5-16
 - 5.5.14 Removing / Replacing the Motherboard / 5-17

Chapter 6 Troubleshooting and Repair

- 6.1 Introduction / 6-1
 - 6.1.1 Helpful Starters / 6-1
- 6.2 System BIOS Related Problems / 6-1
 - 6.2.1 POST Messages / 6-1
 - 6.2.2 Informational Messages / 6-4

Table of Contents

6.2.3	Beep Codes / 6-4
6.2.4	Run-time Error Messages / 6-9
6.3	Quick Troubleshooting / 6-10
6.4	Component-Level Troubleshooting / 6-13
6.4.1	General Overview / 6-13
6.4.2	Starting Check / 6-14
6.4.3	Memory Interface Check / 6-14
6.4.4	CRT Interface Check / 6-15
6.4.5	FDD Interface Check / 6-15
6.4.6	HDD Interface Check / 6-16
6.4.7	Internal Keyboard Check / 6-16
6.4.8	Glide pad Interface Check / 6-17
6.4.9	CD-ROM Interface Check / 6-17
6.4.10	Charger Board Interface Check / 6-18
6.4.11	Serial Port Interface Check / 6-18
6.4.12	External Keyboard Check / 6-19
6.4.13	PS/2 Mouse Interface Check / 6-19
6.4.14	Printer Port Interface Check / 6-20
6.4.15	Audio Port Interface Check / 6-20
6.4.16	PCMCIA Interface Check / 6-21
6.4.17	USB Port Interface Check / 6-21
6.4.18	DC-DC Power Check / 6-22
6.4.19	LCD Panel Interface Check / 6-22
6.4.20	Suspend Function Check / 6-23
6.4.21	LED Indicator Function Check / 6-24
6.4.22	Cover Switch Function Check / 6-25
6.4.23	Internal Modem or LAN Port Check / 6-25
6.4.24	Internal Combo Modem / LAN Port Check / 6-26
6.4.25	FIR Interface Check / 6-26
6.4.26	IEEE1394 Interface Check / 6-27
6.4.27	TV-Out Interface Check / 6-27

Appendix A Notebook Specification

A.1	System Specification / A-1
A.2	Display Specification / A-4

Table of Contents

- A.3 Floppy Disk Drive Specification /A-6
- A.4 CD-ROM Drive Specification /A-7
- A.5 DVD-ROM Drive Specification /A-7
- A.6 CD-RW Drive Specification /A-8
- A.7 Keyboard Specification /A-8
- A.8 Touch Pad Specification /A-8
- A.9 Internal Modem Specification /A-9
- A.10 Internal LAN Specification /A-9
- A.11 Power Supply /A-9
- A.12 Inverter Specification /A-10
- A.13 DC/DC Specification /A-10
- A.14 Charger Specification /A-11
- A.15 Mechanical Specification /A-11
- A.16 Environmental Requirements /A-11

Appendix B Pin Assignments

- B.1 CRT (VGA) Connector / B-1
- B.2 Serial Port Connector / B-2
- B.3 Parallel Port Connector / B-2
- B.4 PS/2 Mouse / Ext. Keyboard Mini-DIN Connector / B-4
- B.5 USB Connector / B-4
- B.6 CD-ROM IDE Connector / B-4
- B.7 DC-IN Jack Pin Assignment / B-5
- B.8 LCD Connector Pin Assignment / B-5
- B.9 FDD Connector / B-6
- B.10 HDD Pin Assignment / B-6
- B.11 Internal Keyboard FPC Connector / B-7
- B.12 Battery Connector / B-7
- B.13 Audio Jack / B-8
- B.14 Internal Microphone Connector / B-8

Appendix C FRU Parts Listing