
5. MAIN Electrical Parts List

Parts Code	Design LOC	Description
0401-001110	D8000	DIODE-SWITCHING
0404-001250	D5000	DIODE-SCHOTTKY
0404-001863	D5001	DIODE-SCHOTTKY
0406-001808	D6000	DIODE-TVS
0406-001809	ZD6017,ZD6018	DIODE-TVS
0406-001829	ZD5012	DIODE-TVS
0406-001853	ZD6015,ZD6016	DIODE-TVS
0505-002088	TR5001,TR5003	FET-SILICON
0505-003618	TR4001,TR5000	FET-SILICON
0601-003833	LED5000	LED
1001-002046	U1008,U2004	IC
1001-002062	U3002	IC
1001-002063	U1001	IC
1001-002065	U2001,U2003,U2006	IC
1001-002078	U2005	IC
1001-002097	U7003	IC
1003-002769	U3007	IC
1009-001076	U3006	IC
1108-000660	UME6000	MEMORY
1201-003869	U3005	IC
1201-004029	U2007,U2010	IC
1201-004109	PAM2000	IC
1201-004219	U1000	IC
1201-004230	U1006	IC
1201-004239	U8000	IC
1201-004241	U1003	IC
1203-008249	U6004	IC
1203-008395	U7001,U7015	IC
1203-008431	U7004	IC
1203-008859	U7002	IC
1203-008867	U3016,U7005,U7010	IC
1203-008872	U3008,U7009	IC
1203-009161	U3010	IC
1203-009213	U5000	IC
1203-009220	U7000	IC
1203-009234	U5001	IC
1203-009240	U2000	IC
1203-009245	U7016	IC

5. MAIN Electrical Parts List

1203-009253	U5007	IC
1203-009254	U5009	IC
1203-009317	U6002	IC
1205-005731	U3021	IC
1205-005833	U2009	IC
1205-005881	U3004	IC
1205-006106	U8001	IC
1205-006119	UCP400	IC
1209-002513	U3009	IC
1209-002555	U1004	IC
1209-002627	U3003	IC
1209-002700	U3011	IC
1404-001724	R5011,TH2000,TH4000	THERMISTOR
1404-001724	THM3000,V5000	THERMISTOR
1405-001458	VR6000	VARISTOR
2007-000148	R7006	R-CHIP
2007-000171	R3004	R-CHIP
2007-003015	R6015,R6018	R-CHIP
2007-007517	R4000	R-CHIP
2007-007589	R5010	R-CHIP
2007-008045	R5006	R-CHIP
2007-008048	R4044	R-CHIP
2007-008052	R6017	R-CHIP
2007-008055	R5000,R5015,R5022	R-CHIP
2007-008055	R6003,R6004,R6005	R-CHIP
2007-008056	R1006,R1007	R-CHIP
2007-008263	R4041	R-CHIP
2007-008419	R4033,R5004	R-CHIP
2007-008420	R7001,R7003	R-CHIP
2007-008516	R3006,R3007,R3011	R-CHIP
2007-008516	R5013,R5025,R6002	R-CHIP
2007-008516	R6009	R-CHIP
2007-008531	R4002,R6014,R7000	R-CHIP
2007-008531	R7004,R7005	R-CHIP
2007-008548	R3016,R3021	R-CHIP
2007-008587	R1008,R8040	R-CHIP
2007-008588	R1004,R3012,R3013	R-CHIP
2007-008588	R4003,R4004,R4005	R-CHIP
2007-008588	R4006,R4007,R4008	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-008588	R4009,R4010,R4011	R-CHIP
2007-008588	R4014,R4015,R4017	R-CHIP
2007-008588	R4018,R4019,R4022	R-CHIP
2007-008588	R4023,R6016	R-CHIP
2007-008766	R4024,R4025	R-CHIP
2007-008785	R1005	R-CHIP
2007-008806	R1000	R-CHIP
2007-009111	R3009,R5009	R-CHIP
2007-009157	R5008,R5012,R5021	R-CHIP
2007-009157	R5044,R5056	R-CHIP
2007-009171	R3008,R5001	R-CHIP
2007-009212	R3005,R8041	R-CHIP
2007-009314	R6001	R-CHIP
2007-009315	R6008	R-CHIP
2007-009352	R5014	R-CHIP
2007-009361	R1011	R-CHIP
2007-009408	R8008,R8011	R-CHIP
2007-009766	R7002	R-CHIP
2007-009801	R4037,R4038	R-CHIP
2007-009805	R1002,R2000	R-CHIP
2007-009920	R6000,R6010	R-CHIP
2007-012197	R5003	R-CHIP
2203-000438	C3068	C-CERAMIC,CHIP
2203-001153	C3086	C-CERAMIC,CHIP
2203-001239	C3082,C3089	C-CERAMIC,CHIP
2203-005056	C3087	C-CERAMIC,CHIP
2203-005682	C1010,C1095,C1100	C-CERAMIC,CHIP
2203-005682	C2081,C2092,C3061	C-CERAMIC,CHIP
2203-005682	C3062,C3063,C7040	C-CERAMIC,CHIP
2203-005682	C7043,C8158	C-CERAMIC,CHIP
2203-005717	L2004	C-CERAMIC,CHIP
2203-005725	C7024,L2003,L2048	C-CERAMIC,CHIP
2203-005726	C1038,C1124	C-CERAMIC,CHIP
2203-005727	C1097,L1058	C-CERAMIC,CHIP
2203-005729	C2047,C2088,C7001	C-CERAMIC,CHIP
2203-005729	C8013,C8022,C8039	C-CERAMIC,CHIP
2203-005729	C8153	C-CERAMIC,CHIP
2203-005731	C2024,C2108,C3001	C-CERAMIC,CHIP
2203-005731	C3007,C3008	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005732	C8038,C8045	C-CERAMIC,CHIP
2203-005734	C1034,C1079,C8014	C-CERAMIC,CHIP
2203-005734	L1001	C-CERAMIC,CHIP
2203-005736	C1023,C1027,C1039	C-CERAMIC,CHIP
2203-005736	C1045,C1057,C1080	C-CERAMIC,CHIP
2203-005736	C1081,C1093,C1125	C-CERAMIC,CHIP
2203-005736	C1129,C2001,C2035	C-CERAMIC,CHIP
2203-005736	C2037,C2040,C2053	C-CERAMIC,CHIP
2203-005736	C2063,C2082,C2084	C-CERAMIC,CHIP
2203-005736	C2112,C2115,C2122	C-CERAMIC,CHIP
2203-005736	C2123,C3003,C3004	C-CERAMIC,CHIP
2203-005736	C3024,C3044,C3047	C-CERAMIC,CHIP
2203-005736	C3048,C3050,C3052	C-CERAMIC,CHIP
2203-005736	C3054,C3058,L1005	C-CERAMIC,CHIP
2203-005736	L1057,L2018,L2032	C-CERAMIC,CHIP
2203-005736	L2058,L3003	C-CERAMIC,CHIP
2203-005777	C1032,C1050,C1064	C-CERAMIC,CHIP
2203-005777	C1126,C3055,L1035	C-CERAMIC,CHIP
2203-005789	C1003,C1026,C1076	C-CERAMIC,CHIP
2203-005789	C1088,C2033,C2036	C-CERAMIC,CHIP
2203-005789	C2098,C2099,C2103	C-CERAMIC,CHIP
2203-005789	L1011,L1031,L2008	C-CERAMIC,CHIP
2203-005792	C1127,L1020,L3004	C-CERAMIC,CHIP
2203-005806	C2083	C-CERAMIC,CHIP
2203-006120	C8046,C8047	C-CERAMIC,CHIP
2203-006121	C6034,C6035	C-CERAMIC,CHIP
2203-006123	C1137,L1072	C-CERAMIC,CHIP
2203-006137	C5009	C-CERAMIC,CHIP
2203-006187	L3020	C-CERAMIC,CHIP
2203-006194	C6041	C-CERAMIC,CHIP
2203-006305	C2075,C3006,C3040	C-CERAMIC,CHIP
2203-006305	C3045,C7010,L2065	C-CERAMIC,CHIP
2203-006305	L3000	C-CERAMIC,CHIP
2203-006318	C1066,C1087	C-CERAMIC,CHIP
2203-006400	C3083,C3085,C5121	C-CERAMIC,CHIP
2203-006410	L1027	C-CERAMIC,CHIP
2203-006423	C1004,C1043,C1098	C-CERAMIC,CHIP
2203-006423	C2003,C2004,C2006	C-CERAMIC,CHIP
2203-006423	C2007,C2008,C2009	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006423	C2010,C2011,C2012	C-CERAMIC,CHIP
2203-006423	C2013,C2015,C2016	C-CERAMIC,CHIP
2203-006423	C2017,C2019,C2020	C-CERAMIC,CHIP
2203-006423	C2021,C2022,C2058	C-CERAMIC,CHIP
2203-006423	C2061,C3042,C3043	C-CERAMIC,CHIP
2203-006423	C3059,C3060,C4016	C-CERAMIC,CHIP
2203-006423	C4017,C4080,C5119	C-CERAMIC,CHIP
2203-006423	C6026,C7025,C8000	C-CERAMIC,CHIP
2203-006423	C8007,C8009,C8023	C-CERAMIC,CHIP
2203-006423	C8024,C8025,C8034	C-CERAMIC,CHIP
2203-006423	C8044,C8154,C8155	C-CERAMIC,CHIP
2203-006423	C8157	C-CERAMIC,CHIP
2203-006556	C1042,C1054,C2074	C-CERAMIC,CHIP
2203-006556	C5056,L2000	C-CERAMIC,CHIP
2203-006562	C5001	C-CERAMIC,CHIP
2203-006604	C3020,C3041,L2021	C-CERAMIC,CHIP
2203-006611	L2061	C-CERAMIC,CHIP
2203-006668	C8010	C-CERAMIC,CHIP
2203-006674	C2025,L1009,L2047	C-CERAMIC,CHIP
2203-006707	L2001,L2024	C-CERAMIC,CHIP
2203-006839	C1000,C1005,C1114	C-CERAMIC,CHIP
2203-006839	C1118,C2044,C2060	C-CERAMIC,CHIP
2203-006839	C3066,C3074,C3081	C-CERAMIC,CHIP
2203-006839	C5027,C5078,C5091	C-CERAMIC,CHIP
2203-006839	C5156,C7048	C-CERAMIC,CHIP
2203-006844	C3038	C-CERAMIC,CHIP
2203-006872	C3035	C-CERAMIC,CHIP
2203-006979	C3019,C3023,C3025	C-CERAMIC,CHIP
2203-006979	C3026,C3027,C3033	C-CERAMIC,CHIP
2203-006979	C3034	C-CERAMIC,CHIP
2203-007194	C1016,C2031	C-CERAMIC,CHIP
2203-007210	C1029,C4025,C4033	C-CERAMIC,CHIP
2203-007210	C4034,C8004	C-CERAMIC,CHIP
2203-007271	C5015	C-CERAMIC,CHIP
2203-007279	C7014	C-CERAMIC,CHIP
2203-007317	C2002,C3002,C3091	C-CERAMIC,CHIP
2203-007317	C5070,C5073,C5095	C-CERAMIC,CHIP
2203-007317	C5096,C5101,C5105	C-CERAMIC,CHIP
2203-007317	C5109,C5110,C5115	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007317	C5118,C5123,C6003	C-CERAMIC,CHIP
2203-007317	C6008,C6044,C7012	C-CERAMIC,CHIP
2203-007391	C3036,C3076,C6036	C-CERAMIC,CHIP
2203-007391	C6039,C8011,C8012	C-CERAMIC,CHIP
2203-007391	C8019	C-CERAMIC,CHIP
2203-007393	C2005,C2014,C2018	C-CERAMIC,CHIP
2203-007393	C2023,C3012,C3017	C-CERAMIC,CHIP
2203-007393	C3028,C3031,C3037	C-CERAMIC,CHIP
2203-007393	C3077,C3080,C3101	C-CERAMIC,CHIP
2203-007393	C5002,C5006,C6011	C-CERAMIC,CHIP
2203-007393	C6012,C6014,C7022	C-CERAMIC,CHIP
2203-007393	C7029,C8001,C8003	C-CERAMIC,CHIP
2203-007425	C5007	C-CERAMIC,CHIP
2203-007456	C5000,C5060,C6023	C-CERAMIC,CHIP
2203-007474	C4046,C5088,C5093	C-CERAMIC,CHIP
2203-007544	C3056	C-CERAMIC,CHIP
2203-007781	C5151,C5152,C5153	C-CERAMIC,CHIP
2203-007781	C5154	C-CERAMIC,CHIP
2203-007796	C2056,C3000,C3015	C-CERAMIC,CHIP
2203-007796	C3021,C3022,C3030	C-CERAMIC,CHIP
2203-007796	C3032,C3065,C3070	C-CERAMIC,CHIP
2203-007796	C3071,C4001,C4002	C-CERAMIC,CHIP
2203-007796	C4003,C4004,C4005	C-CERAMIC,CHIP
2203-007796	C4006,C4007,C4008	C-CERAMIC,CHIP
2203-007796	C4009,C4010,C4011	C-CERAMIC,CHIP
2203-007796	C4013,C4014,C4015	C-CERAMIC,CHIP
2203-007796	C4019,C4020,C4021	C-CERAMIC,CHIP
2203-007796	C4023,C4024,C4027	C-CERAMIC,CHIP
2203-007796	C4028,C4031,C4037	C-CERAMIC,CHIP
2203-007796	C4038,C4039,C4040	C-CERAMIC,CHIP
2203-007796	C4041,C4042,C4044	C-CERAMIC,CHIP
2203-007796	C4045,C4047,C4050	C-CERAMIC,CHIP
2203-007796	C4052,C4053,C4054	C-CERAMIC,CHIP
2203-007796	C4055,C4061,C4063	C-CERAMIC,CHIP
2203-007796	C4064,C4065,C4066	C-CERAMIC,CHIP
2203-007796	C4067,C4068,C4073	C-CERAMIC,CHIP
2203-007796	C4074,C4075,C4076	C-CERAMIC,CHIP
2203-007796	C4077,C4078,C4081	C-CERAMIC,CHIP
2203-007796	C4093,C4094,C4095	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007796	C5049,C5067,C5068	C-CERAMIC,CHIP
2203-007796	C5071,C5075,C5082	C-CERAMIC,CHIP
2203-007796	C5083,C5084,C5089	C-CERAMIC,CHIP
2203-007796	C5094,C5102,C5106	C-CERAMIC,CHIP
2203-007796	C5108,C5111,C5113	C-CERAMIC,CHIP
2203-007796	C5125,C6000,C6001	C-CERAMIC,CHIP
2203-007796	C6002,C6005,C6006	C-CERAMIC,CHIP
2203-007796	C6007,C6013,C6015	C-CERAMIC,CHIP
2203-007796	C6016,C6020,C6022	C-CERAMIC,CHIP
2203-007796	C6024,C6025,C6028	C-CERAMIC,CHIP
2203-007796	C6029,C6030,C6043	C-CERAMIC,CHIP
2203-007796	C7002,C7003,C7006	C-CERAMIC,CHIP
2203-007796	C7013,C7019,C7037	C-CERAMIC,CHIP
2203-007796	C7038,C7039,C7044	C-CERAMIC,CHIP
2203-007796	C7046,C7049,C7050	C-CERAMIC,CHIP
2203-007796	C7052,C7055,C7056	C-CERAMIC,CHIP
2203-007796	C7077,C8002,C8008	C-CERAMIC,CHIP
2203-008095	C3069	C-CERAMIC,CHIP
2203-008097	C1044,C5050,C8006	C-CERAMIC,CHIP
2203-008158	C5013	C-CERAMIC,CHIP
2203-008242	C5065,C5066,C5097	C-CERAMIC,CHIP
2203-008242	C5098,C5103,C5104	C-CERAMIC,CHIP
2203-008242	C6017,C6018,C7005	C-CERAMIC,CHIP
2203-008242	C7008	C-CERAMIC,CHIP
2203-008394	C2026	C-CERAMIC,CHIP
2203-008572	C5149,C5150,C8015	C-CERAMIC,CHIP
2203-008572	C8041,C8042	C-CERAMIC,CHIP
2203-008654	C6019	C-CERAMIC,CHIP
2203-008749	C5159	C-CERAMIC,CHIP
2203-008860	C1040,C1041,C2076	C-CERAMIC,CHIP
2203-008860	C2080,C3014,C3064	C-CERAMIC,CHIP
2203-008860	C3072,C5017,C5022	C-CERAMIC,CHIP
2203-008860	C5026,C5029,C5031	C-CERAMIC,CHIP
2203-008860	C5037,C5042,C5046	C-CERAMIC,CHIP
2203-008860	C5047,C5048,C5051	C-CERAMIC,CHIP
2203-008860	C5053,C5076,C5077	C-CERAMIC,CHIP
2203-008860	C5079,C5081,C5090	C-CERAMIC,CHIP
2203-008860	C5092,C5117,C5157	C-CERAMIC,CHIP
2203-008860	C6051,C6078,C7036	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-008860	C7047,C7051,C7053	C-CERAMIC,CHIP
2203-008860	C7058,C7059,C8016	C-CERAMIC,CHIP
2203-008860	C8021,C8026	C-CERAMIC,CHIP
2203-008876	C1060,C1117,C2054	C-CERAMIC,CHIP
2203-008876	C2055,C3073,C3075	C-CERAMIC,CHIP
2203-008876	C3078,C3079,C5003	C-CERAMIC,CHIP
2203-008876	C5087,C6067,C7007	C-CERAMIC,CHIP
2203-008876	C7028,C7030,C7031	C-CERAMIC,CHIP
2203-008876	C7033,C7045,C8035	C-CERAMIC,CHIP
2203-009064	C4029,C4035,C4036	C-CERAMIC,CHIP
2203-009064	C4079,C4083,C4084	C-CERAMIC,CHIP
2203-009064	R4001	C-CERAMIC,CHIP
2203-009167	C3084,C3088	C-CERAMIC,CHIP
2203-009328	C4012,C4018,C5063	C-CERAMIC,CHIP
2203-009618	C5012,C7032,C7061	C-CERAMIC,CHIP
2203-009733	C3029,C5014,C5034	C-CERAMIC,CHIP
2203-009733	C5035,C5038,C5040	C-CERAMIC,CHIP
2203-009733	C5041,C5043,C5044	C-CERAMIC,CHIP
2203-009733	C5052,C5054,C5061	C-CERAMIC,CHIP
2203-009733	C5062,C5080,C5086	C-CERAMIC,CHIP
2203-009733	C5155,C7000,C7011	C-CERAMIC,CHIP
2203-009733	C7015,C7016,C7017	C-CERAMIC,CHIP
2203-009733	C7018,C7020,C7021	C-CERAMIC,CHIP
2203-009733	C7026,C7027,C7035	C-CERAMIC,CHIP
2203-009733	C7042,C7062,C7063	C-CERAMIC,CHIP
2203-009733	C7064,C7065,C7066	C-CERAMIC,CHIP
2203-009733	C7067,C7068,C7071	C-CERAMIC,CHIP
2203-009733	C7072,C7073,C7074	C-CERAMIC,CHIP
2203-009733	C7075,C7076	C-CERAMIC,CHIP
2203-009735	C4057,C4058	C-CERAMIC,CHIP
2203-009738	C6021	C-CERAMIC,CHIP
2203-009812	C5005	C-CERAMIC,CHIP
2203-009858	C2057,C5008,C5010	C-CERAMIC,CHIP
2203-009858	C5011,C5036,C5057	C-CERAMIC,CHIP
2203-009858	C8005	C-CERAMIC,CHIP
2409-001400	TA3000	CAPACITOR
2703-002649	C1090,C2089,L1012	INDUCTOR-SMD
2703-002649	L1014,L1062,L2055	INDUCTOR-SMD
2703-002858	L1048	INDUCTOR-SMD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2703-002900	C1077,L1064	INDUCTOR-SMD
2703-002901	C2052,L1015,L2059	INDUCTOR-SMD
2703-002901	L2060	INDUCTOR-SMD
2703-002903	C1048,C2030,C2105	INDUCTOR-SMD
2703-002903	C2110,L1018,L1054	INDUCTOR-SMD
2703-002903	L2002,L3008,L3013	INDUCTOR-SMD
2703-002903	L3019	INDUCTOR-SMD
2703-002955	C1052,C1055,L1052	INDUCTOR-SMD
2703-002959	C3016,L3009,L3016	INDUCTOR-SMD
2703-002961	L1033	INDUCTOR-SMD
2703-002999	C1046,C2049	INDUCTOR-SMD
2703-003004	L2062	INDUCTOR-SMD
2703-003970	L1019	INDUCTOR-SMD
2703-004000	C1078,L1022	INDUCTOR-SMD
2703-004012	C3053,L2034	INDUCTOR-SMD
2703-004013	C1020,L1074,L2005	INDUCTOR-SMD
2703-004013	L2010,L2040,L2054	INDUCTOR-SMD
2703-004013	L3002	INDUCTOR-SMD
2703-004014	C1035,C2039	INDUCTOR-SMD
2703-004018	C2113,L2019	INDUCTOR-SMD
2703-004033	L2023,L2057	INDUCTOR-SMD
2703-004034	U8004	INDUCTOR-SMD
2703-004036	L1059	INDUCTOR-SMD
2703-004037	C3039	INDUCTOR-SMD
2703-004038	C1024,L1039,L1044	INDUCTOR-SMD
2703-004038	L2035,L2039	INDUCTOR-SMD
2703-004286	C1072,C2073,C3009	INDUCTOR-SMD
2703-004286	L1007,L1037,L2020	INDUCTOR-SMD
2703-004286	L2045,L2063	INDUCTOR-SMD
2703-004287	C1033,C2032,L1002	INDUCTOR-SMD
2703-004287	L1003,L1028,L1032	INDUCTOR-SMD
2703-004287	L1053,L2066	INDUCTOR-SMD
2703-004288	C1002,C2100,C3051	INDUCTOR-SMD
2703-004288	L1006,L1023,L2041	INDUCTOR-SMD
2703-004288	L2064,L3014	INDUCTOR-SMD
2703-004289	C1084,C1085,C2085	INDUCTOR-SMD
2703-004289	C2095,L1013,L1030	INDUCTOR-SMD
2703-004289	L1043,L2016,L2056	INDUCTOR-SMD
2703-004302	C1006,C1007,C1030	INDUCTOR-SMD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2703-004302	L1016,L1045,L1050	INDUCTOR-SMD
2703-004302	L2038,L2049,L3001	INDUCTOR-SMD
2703-004317	C1086,C2094,C2104	INDUCTOR-SMD
2703-004317	L1038,L1040,L1042	INDUCTOR-SMD
2703-004317	L2006,L2026,L2046	INDUCTOR-SMD
2703-004317	L2050	INDUCTOR-SMD
2703-004328	C2109,L1008,L1017	INDUCTOR-SMD
2703-004328	L2051,L8017	INDUCTOR-SMD
2703-004408	C8156	INDUCTOR-SMD
2703-004703	C1058,L1025,L1026	INDUCTOR-SMD
2703-004703	L2007,L2014,L6001	INDUCTOR-SMD
2703-004763	L2013	INDUCTOR-SMD
2703-004764	C1091,L8016	INDUCTOR-SMD
2703-004853	L1024,L1029,L3010	INDUCTOR-SMD
2703-004911	L3015	INDUCTOR-SMD
2703-004976	L2022	INDUCTOR-SMD
2703-005066	L2025	INDUCTOR-SMD
2703-005086	C2038,L2068,L2069	INDUCTOR-SMD
2703-005201	L5000,L5003,L5008	INDUCTOR-SMD
2703-005201	L5010,L5011,U5005	INDUCTOR-SMD
2703-005295	C1089	INDUCTOR-SMD
2703-005418	L7006	INDUCTOR-SMD
2703-005419	L7007	INDUCTOR-SMD
2703-005505	L8000	INDUCTOR-SMD
2703-005555	L3017,L3018	INDUCTOR-SMD
2703-005581	L5001,L5002,L5005	INDUCTOR-SMD
2703-005581	L5006,L5007,L5009	INDUCTOR-SMD
2703-005581	L5012,L5013,L5014	INDUCTOR-SMD
2703-005731	L7009	INDUCTOR-SMD
2801-005512	OSC5000	CRYSTAL-UNIT
2901-001690	C4059	FILTER-EMI
2904-002134	F1000	FILTER-SAW
2904-002198	F2006	FILTER-SAW
2904-002241	F2009	FILTER-SAW
2904-002326	F1001,F2002	FILTER-SAW
2904-002350	F2003	FILTER-SAW
2904-002394	F3002,F3003	FILTER-SAW
2904-002397	F2005	FILTER-SAW
2904-002405	F2004	FILTER-SAW

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2904-002409	F3001	FILTER-SAW
2910-000364	F1007	FILTER
2910-000401	F2008	FILTER
2910-000412	F1006	FILTER
2911-000475	U2002	FILTER
2911-000476	U1009	FILTER
3003-001257	MIC8000	MIC-CONDENSOR
3301-001534	L8002,L8003	CORE-FERRITE
3301-001885	L8019	CORE-FERRITE
3301-002078	L3810,L3811	CORE-FERRITE
3301-002122	L8014,L8015	CORE-FERRITE
3301-002223	L7000,L7001,L7002	CORE-FERRITE
3301-002223	L7003,L7004	CORE-FERRITE
3301-002235	L8012	CORE-FERRITE
3301-002237	L1000,L8004	CORE-FERRITE
3301-002238	L3011,L3021,L3023	CORE-FERRITE
3301-002312	L3007,L3022,L7005	CORE-FERRITE
3301-002312	L7008,L7010	CORE-FERRITE
3301-002331	L6002	CORE-FERRITE
3301-002356	L8007,L8008	CORE-FERRITE
3301-002394	L8001,L8005	CORE-FERRITE
3705-001708	RFS1001	CONNECTOR-COAXIAL
3705-001937	RFS1000	CONNECTOR-COAXIAL
3709-001932	SIM4UP	CONNECTOR-CARD
3709-001933	SIM1	CONNECTOR-CARD
3709-001934	SIM2,SIM3	CONNECTOR-CARD
3710-003871	SOC7004	CONNECTOR-SOCKET
3710-003874	SOC7000,SOC7001	CONNECTOR-SOCKET
3710-004008	BTC5000	CONNECTOR-SOCKET
3710-004027	SOC7002,SOC7003	CONNECTOR-SOCKET
3710-004285	SOC6000	CONNECTOR-SOCKET
3712-001604	ANT1005,ANT1006	CONNECTOR
3712-001604	ANT2000,ANT2001	CONNECTOR
3712-001604	ANT2002,ANT3002	CONNECTOR
3712-001604	ANT3011,ANT8100	CONNECTOR
3712-001604	ANT8101	CONNECTOR
3712-001621	ANT3003,ANT3004	CONNECTOR
3712-001621	ANT3006,ANT3007	CONNECTOR
3712-001621	ANT3012	CONNECTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

3712-001626	ANT1000,ANT1001	CONNECTOR
3712-001626	ANT1002,ANT1003	CONNECTOR
3712-001626	ANT1004,ANT3000	CONNECTOR
3712-001626	ANT3008,ANT3009	CONNECTOR
3712-001626	ANT3010	CONNECTOR
3712-001666	ANT8000,ANT8001	CONNECTOR
4709-002226	F1004	RF-MODULE
4709-002412	F1002,F1005	RF-MODULE
4709-002416	F2001	RF-MODULE
4709-002484	F2000	RF-MODULE
GH62-00028A	GAS6000	JSM-TSL-2-2.2-1.8BK
GH63-18154A	SC6006	SC-A715F-AP
GH63-18155A	SC6001	SC-A707F-HB
GH63-18156A	SC6004	SC-A707F-WIFI
GH63-18157A	SC6002	SC-A707F-PMIC
GH63-18158A	SC6003	SC-A707F-RF
GH63-18159A	SC6005	SC-A715F-MIPI
GH02-20299A	SC6006SP	GH02-20299A

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.